

Nexxus™


BATH CONTROL SYSTEM OPERATING INSTRUCTIONS

Your whirlpool bathtub has been equipped with Electronic Controls to provide features that allow you to customize your bathing experience to your individual preference. Please familiarize yourself with the features and operating instructions below in order to maximize the enjoyment you receive from your bath. These operating instructions should be used in conjunction with the other instructions and warnings provided with your whirlpool bathtub in order to fully understand and safely utilize the bathtub.

TABLE OF CONTENTS

1. OPERATING INSTRUCTIONS
2. TROUBLESHOOTING & FAQ

CONTROL PAD LAYOUT

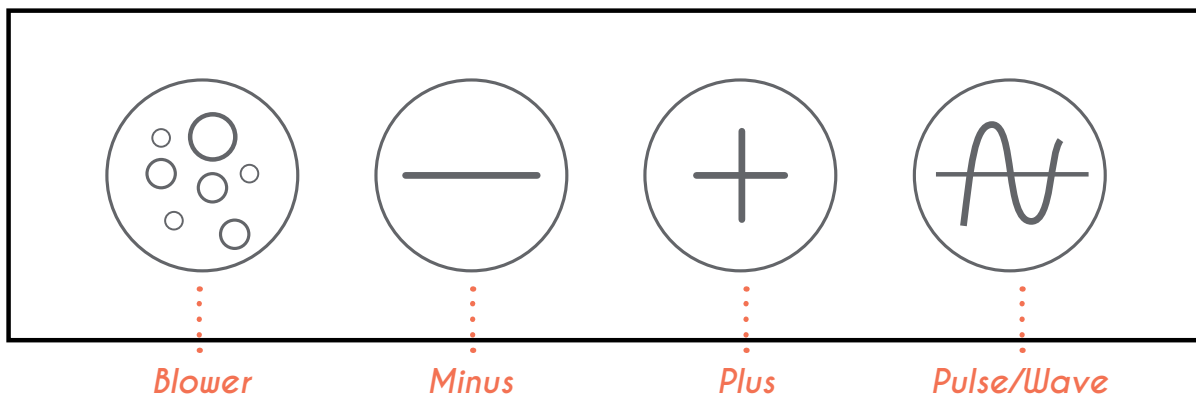


Instructions for Controller Heads:
26400-100-113
26400-102-103



1. OPERATING INSTRUCTIONS

1. Blower

- a. Press and hold Blower button for ~2 seconds to turn ON. The Blower will start on the highest fixed blower speed setting of "6".
- b. To adjust the "fixed" blower speed setting, tap the Plus or Minus buttons. The Blower has six fixed speeds that can be adjusted from "6" to "1".
- c. Press and hold the Blower button to turn Blower OFF.

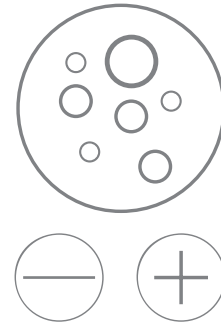

2. Pulse/Wave

- a. With Blower on, tap Wave/Pulse button to turn ON Wave
- b. Tap again to switch to Pulse.
- c. Tap again to switch back to Wave.
- d. To exit Pulse/Wave, tap Blower button once to resume Speed 6, or press and hold Blower button to turn OFF.



2. FAQ & TROUBLESHOOTING

1. What do I do if the Blower does not turn on?

- a. Check electrical connections to the Blower.

2. Why does the Blower come on by itself?

Fifteen minutes after operation the blower will start a cleaning cycle to purge the lines of water and dry the Blower tubes. During this cycle the control pad will not turn the Blower off when pressed. After three minutes the Blower will automatically turn off.

For all other technical issues please contact CMP technical support through our website www.c-m-p.com or by phone at 800-733-9060.