

# Nexxus™


## BATH CONTROL SYSTEM OPERATING INSTRUCTIONS

Your whirlpool bathtub has been equipped with Electronic Controls to provide features that allow you to customize your bathing experience to your individual preference. Please familiarize yourself with the features and operating instructions below in order to maximize the enjoyment you receive from your bath. These operating instructions should be used in conjunction with the other instructions and warnings provided with your whirlpool bathtub in order to fully understand and safely utilize the bathtub.

### TABLE OF CONTENTS

1. OPERATING INSTRUCTIONS
2. TROUBLESHOOTING & FAQ

### CONTROL PAD LAYOUT

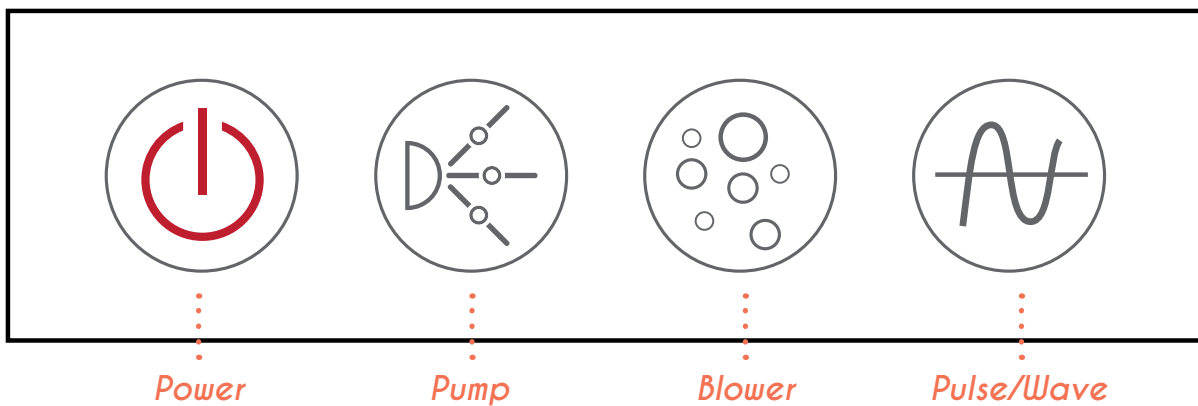

Instructions for Controller Heads:  
26400-100-101  
26400-102-111



# 1. OPERATING INSTRUCTIONS

## 1. Power (Activate System)

- a. Tap Power button to turn ON control head.
- b. Tap Power button again to turn OFF.



## 2. Pump

- a. Tap Pump button to turn ON.  
NOTE: If water level is too low, pump will not activate.
- b. Tap Pump button again to turn OFF.



## 3. Blower

- a. Press and hold Blower button for ~2 seconds to turn ON. The Blower will start on the highest fixed blower speed setting of "6".
- b. To adjust the "fixed" blower speed setting, tap the Blower button. The Blower has six fixed speeds that can be adjusted from "6" to "1".
- c. Press and hold the Blower button to turn Blower OFF.



## 4. Pulse/Wave

- a. With Blower on, tap Wave/Pulse button to turn ON Wave.
- b. Tap again to switch to Pulse mode.
- c. Tap again to switch back to Wave mode.
- d. To exit Pulse/Wave mode, tap Blower button once to resume Speed 6, or press and hold Blower button to turn OFF.
- e. **Purge/Clean Cycle:** Fifteen minutes after the blower is turned off, the blower will automatically activate for 2-3 minutes. During the purge cycle the blower cannot be deactivated by touching any buttons on the control.



# 2. FAQ & TROUBLESHOOTING

## 1. What do I do if the Pump does not turn on?

- a. Check water level.
- b. Pump will not engage without a sufficient water level.

## 2. What do I do if the Blower does not turn on?

- a. Check electrical connections to the Blower.

## 4. Why does the Blower come on by itself?

Fifteen minutes after operation the blower will start a cleaning cycle to purge the lines of water and dry the Blower tubes.. During this cycle the control pad will not turn the Blower off when pressed. After three minutes the Blower will automatically turn off.

For all other technical issues please contact CMP technical support through our website [www.c-m-p.com](http://www.c-m-p.com) or by phone at 800-733-9060.