

DURA-CLEAN 280 STYLE REPLACEMENT BAG



Unlike traditional cleaner bags with zippers or velcro to keep the bag shut, Dura-clean uses a flap to keep the bag closed and snaps to hold the flap in place.



The snaps will not jam like zippers or weaken like velcro. The fold-back style ensures the back empties cleanly and easily.

ATTACHING TO CLEANER

- Ensure the bag snaps are fastened
- Insert collar into the cleaner
- Attach the two Velcro tabs around the hose

DETACHING FROM CLEANER

- Detach two Velcro tabs around the hose
- Press collar tabs or twist collar to remove

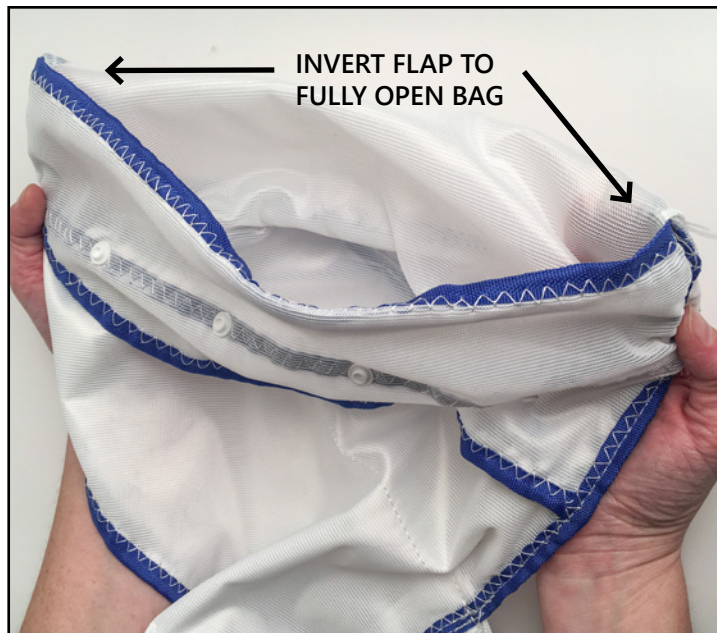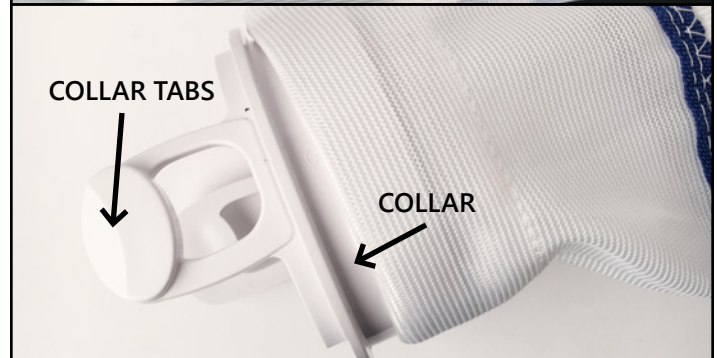

EMPTYING/CLEANING THE BAG

- If possible, allow bag to dry before emptying
- Undo the four snaps
- Insert thumbs inside the corners of the bag
- Place fingers on outside corners
- Invert the flap, opening the bag
- Dump the bag and rinse if necessary
- Invert the flap back in place
- Refasten the four snaps
- Reattach the bag to the cleaner