

Nexxus™



BATH CONTROL SYSTEM OPERATING INSTRUCTIONS

Your whirlpool bathtub has been equipped with Electronic Controls to provide features that allow you to customize your bathing experience to your individual preference. Please familiarize yourself with the features and operating instructions below in order to maximize the enjoyment you receive from your bath. These operating instructions should be used in conjunction with the other instructions and warnings provided with your whirlpool bathtub in order to fully understand and safely utilize the bathtub.

TABLE OF CONTENTS

1. OPERATING INSTRUCTIONS
2. TROUBLESHOOTING & FAQ

CONTROL PAD LAYOUTS

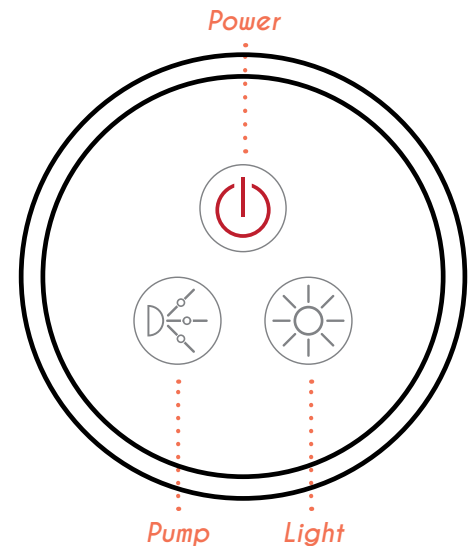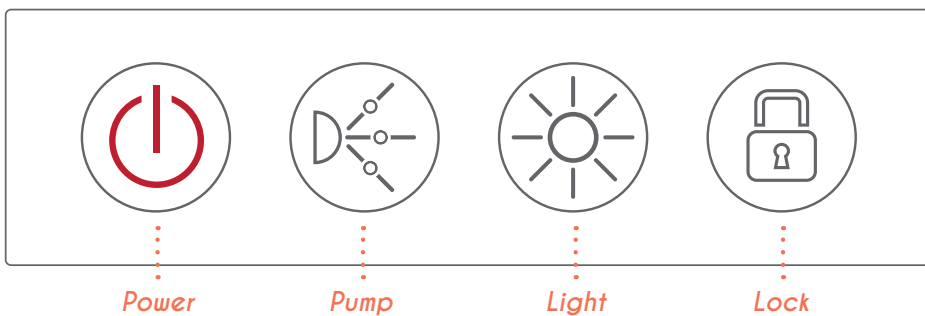

Instructions for Controller Heads:

26400-100-110

26400-102-100

26406-000-103 (Circular Controller - No Lock)

26406-002-103 (Circular Controller - No Lock)



1. OPERATING INSTRUCTIONS

1. Power (Activate System)

- a. Tap Power button to turn ON control head.
- b. Tap Power button again to turn OFF.



2. Pump

- a. Tap Pump button to turn ON.
NOTE: If water level is too low, pump will not activate.
- b. Tap Pump button again to turn OFF.



3. Light

- a. Press and hold Light button ~2 seconds to turn light ON.
- b. Tap Light button to cycle through light colors.
- c. Press and hold to turn light OFF.



4. Lock (not featured on round control heads)

- a. Press and hold Lock button for ~2 seconds to activate "Lock" feature.
- b. This will prevent the user from accidentally activating a button once the system is on.
- c. Press and hold to turn lock OFF.



2. FAQ & TROUBLESHOOTING

1. What do I do if the Light does not turn on?

- a. Check the electrical connections to the Light.

2. What do I do if the Pump does not turn on?

- a. Check water level.
- b. Pump will not engage without a sufficient water level.

3. What do I do if the Pump and/or Light functions are not working when control head is activated?

- a. Check if Lock function is engaged.

For all other technical issues please contact CMP technical support through our website www.c-m-p.com or by phone at 800-733-9060.